



# FURNITURE

SERIES: TW/TWB/TWCC

BRACKET: PLASTIC  
WHEEL: TWIN BLACK NYLON  
BEARING: PLAIN



TW/TWB							
<b>TW-40</b>	40	10/10	40	8	40	46	40
<b>TW-50</b>	50	11/11	47	8	50	54	50
<b>TW-60</b>	60	13/13	52	9	55	65	60
<b>TWB-40</b>	40	10/10	40	8	40	46	40
<b>TWB-50</b>	50	11/11	47	8	50	54	50
<b>TWB-60</b>	60	13/13	52	9	55	65	60



TW/TWB							
<b>TW-75</b>	75	14	68	10	62	84	100
<b>TWB-75</b>	75	14	68	10	62	84	100
<b>TW-100</b>	100	16	72	11	92	102	100
<b>TWB-100</b>	100	16	72	11	92	102	100

## FITTINGS

	PLATE CODE	CASTOR SIZES	PLATE	HOLE CENTRE	HOLE DIAMETER
	<b>T1</b>	40 & 50	38x38	25.4x25.4	5.2
	<b>T2</b>	75	55x65	41x51	6.5
	<b>T3</b>	100	55x65	41x51	8

	FRICTION STEM CODE	CASTOR SIZES (mm)	FRICTION
	<b>FS1</b> + Required length	40/50	11x22

	THREAD STEM CODE	CASTOR SIZES (mm)	THREAD X LENGTH
	<b>TS1</b> + Thread x length	40/50	8x15 / 10x15 / 10x25
	<b>TS2</b> + Thread x length	60	8x15 / 10x20
	<b>TS3</b> + Thread x length	75	12x25
	<b>TS4</b> + Thread x length	100	12x25

	WOOD SOCKET / STEM CODE	CASTOR SIZES (mm)	WOOD SOCKET / STEM
	<b>WS1</b>	40 & 50	9x29 / 8x38

### HARD TREAD



TWCC CHAIR CASTOR				STEM			
<b>CTW-50</b>	50	11/11	54	11x22	50	57	50

### SOFT PU TREAD



				STEM			
<b>PUCTW-50</b>	50	11/11	45	11x22	50	59	50

LIGHT